

# WINNERS ONLY®

## ASSEMBLY INSTRUCTIONS

PROD. NO: DT43666

Thank you for purchasing this quality product. Please read instructions thoroughly before unpacking the assembly parts.

Caution : Sharp exposed staple tips can cause injury, therefore for your protection, please remove any exposed staples used in packing.

Please keep all hardware parts out of the reach of children.

1. We recommend that you should assemble this product with assistance of another person; this will make the assembly easier, and will help to prevent personal injury and to insure parts are not damaged during the assembly process.

2. Before beginning, please check the packing materials carefully for small parts which may have come loose inside the carton during shipping. Please do not discard any packing material until all parts have been located. If any parts are missing, please contact your dealer for prompt replacement.

3. To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residues and rough surfaces and also check for staples or nails left after removing the packing materials. The manufacturer will not be held responsible if preventive steps are not taken prior to installation.

4. Please do not over tighten screws or bolts. During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the below mentioned components are attached to the furniture properly and kept tightened.

5. Please lay all parts and hardware on a non abrasive surface such as a carpet, and follow the assembly.

This product will take 15-20 minutes to assemble

### Components List:

NO	DESCRIPTION	SKETCH	QTY
A	TABLE TOP		1 PC
B	LEG		4 PCS

### Hardware List:

NO	DESCRIPTION	SIZE	SKETCH	QTY
1	HEX BOLT	5/16 X 2 1/2"		8 PCS
2	SPRING WASHER	M8 X 13mm		8 PCS
3	FLAT WASHER	M8 X 18mm		8 PCS
4	WRENCH	85mm L		1 PC
5	ALLEN KEY	M4		1 PC


Screw driver is required for assembly (not included)

**TIP:** store the Allen key and or Wrench used in assembly in this product's drawer or use masking or painter's tape to affix it to the underside of the product. This will make it easier to find if you want to periodically tighten bolts or disassemble the product.

# WINNERS ONLY®

## ASSEMBLY INSTRUCTIONS


PROD. NO: DT43666

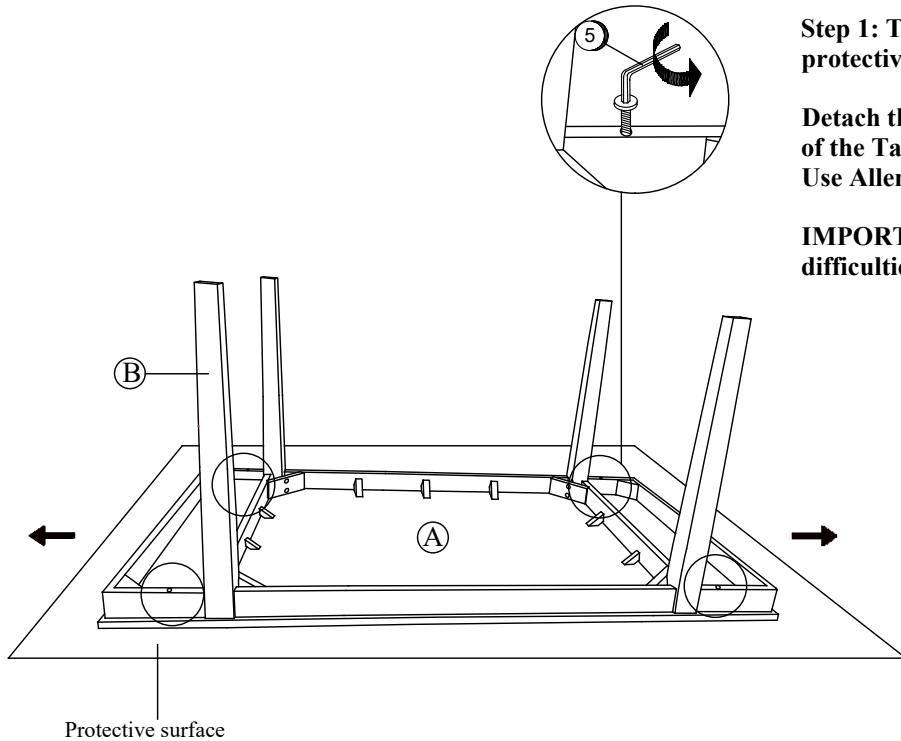


**Step 1:** Turn the Table Top (A) upside down on a soft protective surface such as a carpet.

Detach the Table aprons (2pcs) located at each end of the Table Top (A) by loosening up the JCBC Bolt. Use Allen Key (5) provided.

**IMPORTANT:** Failing to remove the apron will cause difficulties to install the legs and potential damages.

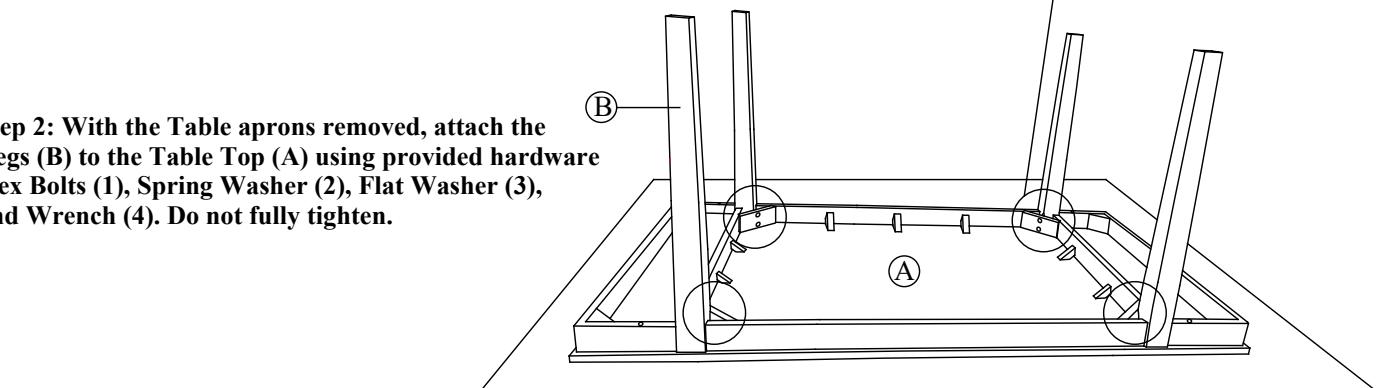

**Step 2:** With the Table aprons removed, attach the Legs (B) to the Table Top (A) using provided hardware Hex Bolts (1), Spring Washer (2), Flat Washer (3), and Wrench (4). Do not fully tighten.

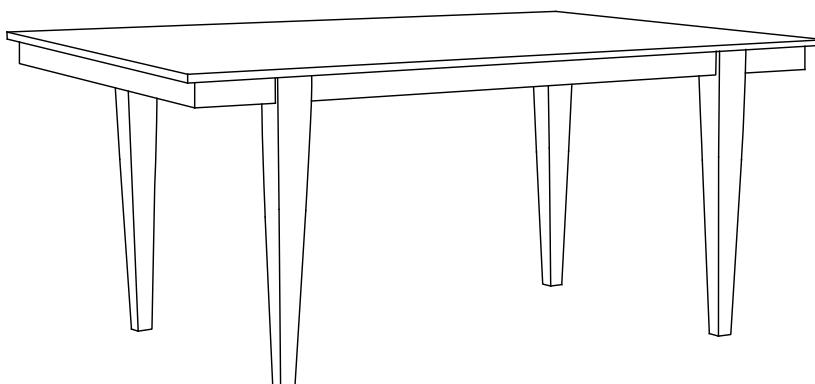

**Step 3:** Turn the Table to a standing position.

**Step 4:** Check the Table balance and fully tighten all the bolts to complete the assembly.